


Expansion Joint Covers Technical Product Information

Straight Flange Finishing Installation Instructions

READ COMPLETE INSTRUCTIONS CAREFULLY BEFORE STARTING

ROOF-TO-ROOF

Complete sealing of flanges in accordance with roofing manufacturer's specification for stripping metal flanges. Apply ballast as required by roofing manufacturer up to bellows. Do not apply any bituminous materials to bellows.

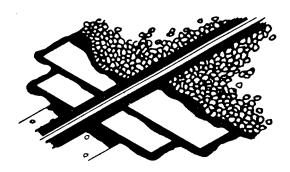

ROOF-TO-WALL

Complete sealing of roof flange in accordance with roofing manufacturer's specification for stripping metal flanges. Apply ballast as required by roofing manufacturer up to bellows. Do not apply any bituminous materials to bellows.

Seal top edge of wall flange and install metal counterflashing (not included) of same material as flange of expansion joint cover to cover wall flange.

