




Pipe Flashings


Technical Product Information

Installation Instructions

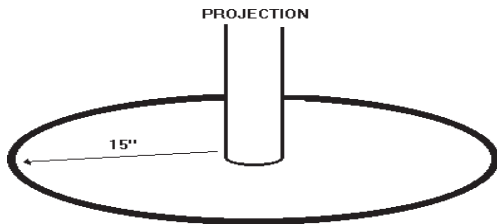

STEP 1


Clean and prepare surface 15" in all directions from the penetration. Check with roofing manufacturer to determine if any special preparations are required.

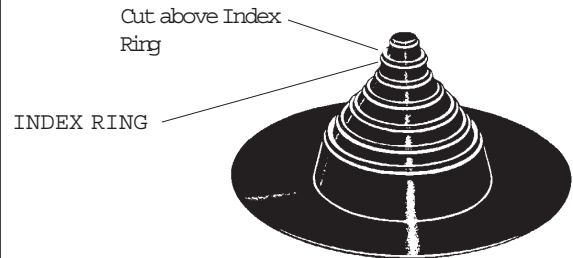

STEP 2


Select proper step of the flashing and cut off above index ring. **REMEMBER:** When in doubt, cut the smaller size. Clean and prime flange in accordance with roofing manufacturer's recommendations.

APPROVED ADHESIVE, TAPE, OR WELDED ATTACHMENT
(per roofing manufacturer's specification)

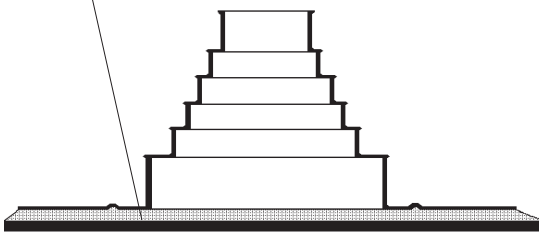

STEP 3

Apply roofing manufacturers' specified adhesive on base flange of boot (where required), place boot around projection, and complete attachment of flashing to roofing, according to roofing manufacturer's specification.

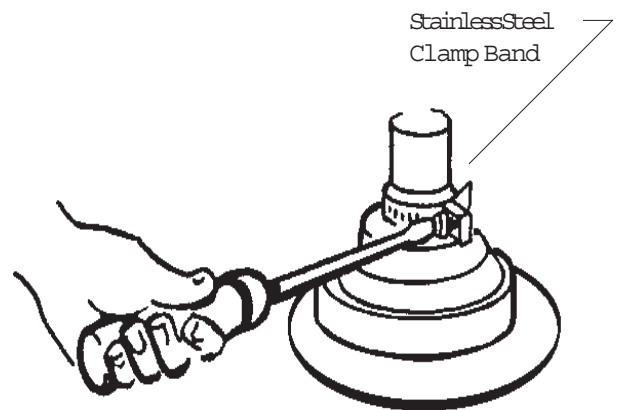

STEP 4

Using the Stainless Steel SnapLock Clamp, place at top of boot and tighten to projection.